


Clean fuel filter Engine 110

Carburetor engine


- Unscrew fuel return valve and screw plug at carburetor.
- Remove fuel filter and clean.
- Renew gasket at screw plug.
- Check sealing.

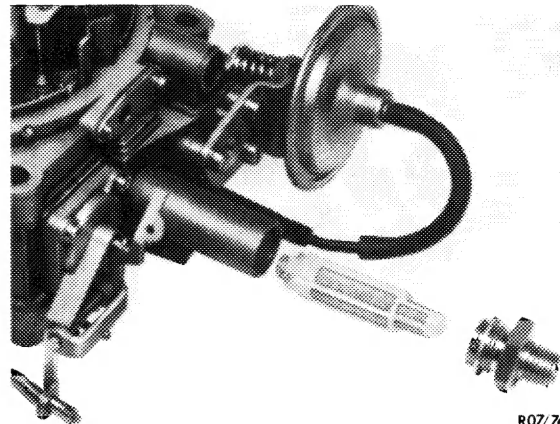

Replace fuel filter Engines 114, 130

Carburetor engine


- Loosen hose clips, take out fuel filter and install new fuel filter in direction of flow (arrow) along with new rubber hoses.
- Check sealing.

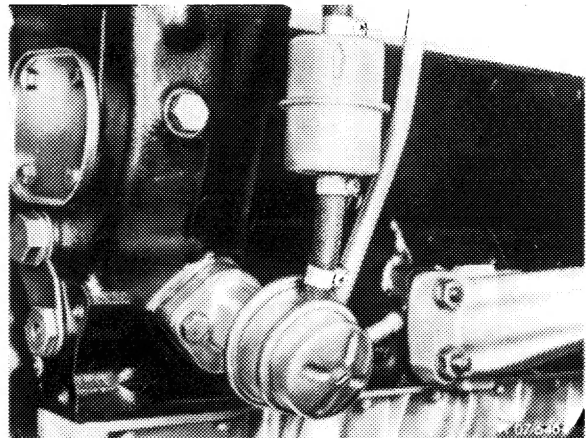


Engine 116


Electronically controlled gasoline injection engine Fuel filter in engine compartment

- Unclamp fuel hoses left and right of filter.
- Loosen hose clips, take out fuel filter.
- Unscrew connecting plug from removed filter and mount on new filter with new gasket.
- Install new filter in direction of flow (arrow).
- Check sealing.

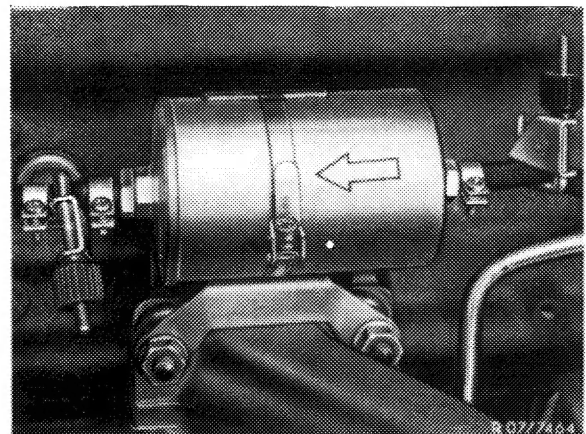

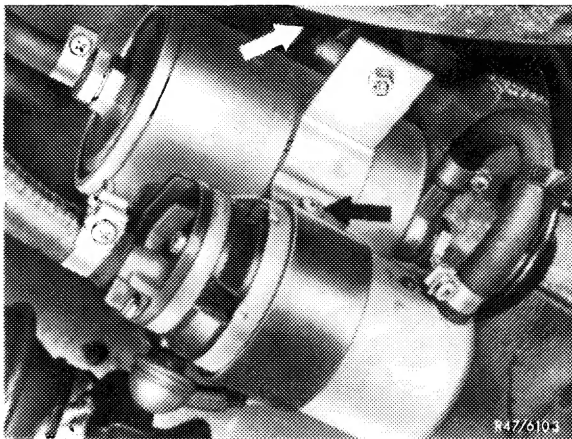

Electronically controlled gasoline injection engine

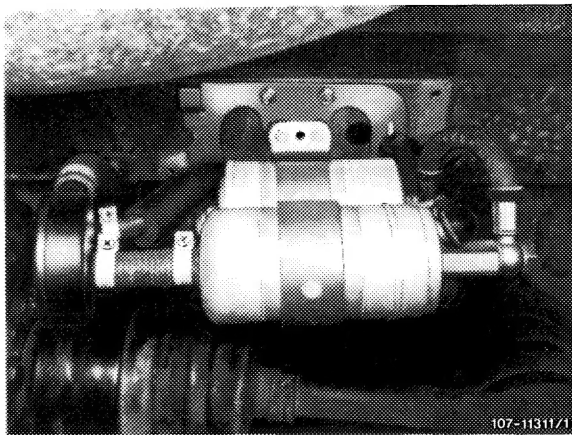

CIS (continuous injection system)

Engines 116, 117

Electronically controlled gasoline injection engine

Engines 100, 110, 117 CIS (continuous injection system)

Fuel filter between rear axle and fuel tank

- Unscrew cover box.
- Take off pressure hoses.
- Loosen fixing screws (arrows) and remove filter.
- Unscrew connecting plug from removed filter and mount on new filter with new gasket.
- Install new filter in direction of flow.
- On CIS (continuous injection system) locate fuel filter in holder. For this purpose, slip filter into holder until holder is in center of transparent foil.
- Check for leaks.